

Spareparts

ITEM NO.	PART NO.	DESCRIPTION
1	X4487370187	Accessory Holder
2	Q4487362135	Accessory Storage Box Cover
3	F6413700920	Rubber Hose
4	F3013700919	Pressure Regulator
5	J0023160647	Safety Valve
6	J0784290032	Screw M4x12
7	J5637160032	End Cap
8	F5013700908	Pressure Gauge
9	J2993490675	Quick Coupler
10	Q4486012135	Control Panel
11	Q3766408007	Slide Sleeve
12	Q42021111331	Pressure Regulator Knob
13	J0782730032	Screw M4x10
14	J0783570033	Screw M5x12
15	J0800470033	Screw M6x35
16	Q3766398001	Nut
17	Q3766388001	Latch assm (L)
18	J0200580003	Spring
19	Q3762988001	Plastic Washer
20	J3890570211	Lever
21	J2020530033	Lock Nut
22	Q42010270011	Handgrip
23	Q3766378001	Latch assm (R)
24	J3264600752	Handle
25	D3005000142	Pressure Switch
26	J0780600033	Head Screw M8x8
27	D1006083181	Power Cord
28	J3434590048	Transfer Tube
29	J0189940407	Check Valve
30	J7383090034	Capacitor Shroud
31	X4207350167	Capacitor Fixed Ring
32	J3095040201	Air Filter
33	J0783480674	Self-Tapping Screw ST3.9x16F

ITEM NO.	PART NO.	DESCRIPTION
34	D6015001024	Capacitor
35	D5010003001	Crimp Cap
36	F0000901043	Heat Shield Assembly
37	Q411A263001	Silencing tube
38	J3161200423	Elbow Fitting
39	A5538911057	Motor Pump Assembly
40	J0994540201	Metal Tube
41	X0004360212	Cushion Pad
42	J2020810033	Flange Nut M8
43	J2852990033	Shoulder Bolt
44	X3060600037	Wheel
45	Z1240000256	Clamp
46	J0782380299	Screw ST4.8x14
47	J2981850040	Flat Washer Ø10
48	J0191860022	Washer Ø10
49	J2021830040	Flange Nut M10
50	Q3515632001	Plastic End Cap
51	J0783470485	Self-Tapping Screw ST3.9x16F
52	J0807660040	Screw M8x14
53	AT1620.00.00.01	Tank
54	J0907040313	Drain Valve
55	J0780600033	Washer Ø8
56	X4200590169	Rubber Foot
57	J0783570033	Head Screw M5x12
58	J5638170344	End Cap
59	Q4487332135	Toolbox Components

Figures

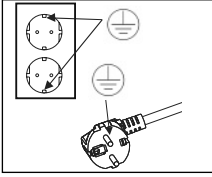


Fig. A

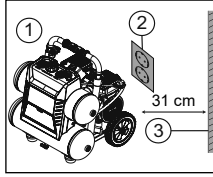


Fig. B

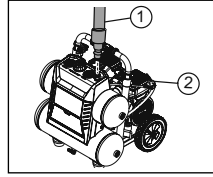


Fig. C

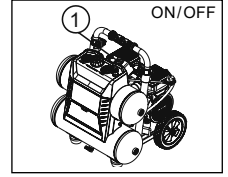


Fig. D

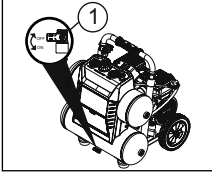


Fig. E

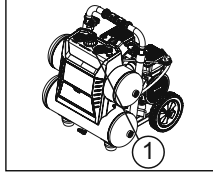


Fig. F

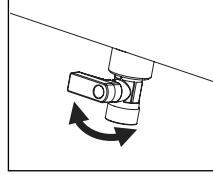


Fig. G

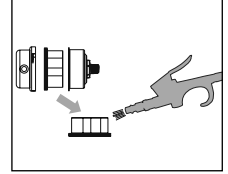


Fig. H

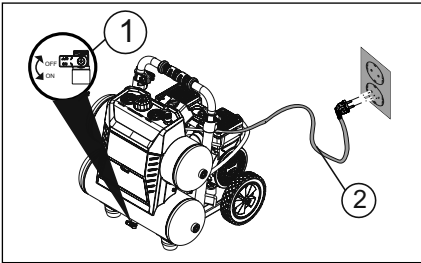


Fig. I

Key parts

